
How to Use


⚠ Caution

Removing

Loosen clamp ring (1), and separate the multiconnector into two parts, multiconnector into two parts, socket side and plug side.




Insertion and removal of tube

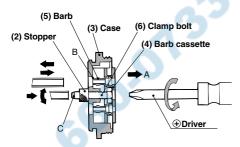

- Turn the clamp bolt (6) to the left with a screwdriver, loosen until the stopper (2) touches the case (3), and barb cassette (4) will be pulled out in the direction A. Then clamp portion B, consisting of barb (5) and case (3), will be freed. Next, insert or remove the tube.
- The corresponding numbers are stamped on both the socket and plug sides for each tube connection.
- **3.** If it is hard to insert the tube, enlarge the tube end with the head of stopper (2), expander C, before inserting tube.
- Insert tube until it clears mounting of barb (5) completely.

Clamping of tube

- After inserting tube, tighten clamp bolt
 (6) clockwise with a screwdriver.
- Barb cassette creeps into the direction D and the tube will be clamped at the B clamp portion (5) consisting of barb (3) and case.




Connection

- 1. Push together and rotate both of the cases, and the plug side will slide into the socket side at the proper position.
- The ring E, male and female, of the plug side and socket side will interlock with each other at the proper position by pushing together and rotating.
- **3.** Final process of connection is to screwin the clamp ring.




Cover mounting

- **1.** Cover is mountable on both sides, plug side and socket side.
- 2. Enlarge cover and mount cover onto mounting area.



How to Order

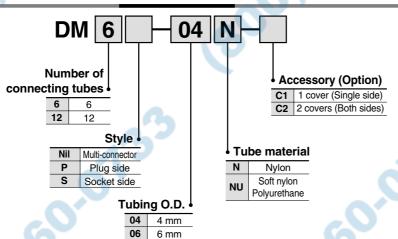











VMG

800) 660,